

Indhold

Trådløs signal forstærker	2
Wireless signal repeater	4

Trådløs signal forstærker

Sluk for alarmcentralen, træk strømstikket ud og sæt ON/Off knappen på OFF. Sluk også for alle sensorer!

Det er meget vigtigt at signal forstærkeren bliver placeret i nærheden af de sensorer den skal forstærke signalet på!

Trin 1.


1. Indsæt den medfølgende jumper i "mode" bag på signal forstærkeren.



Før



Efter

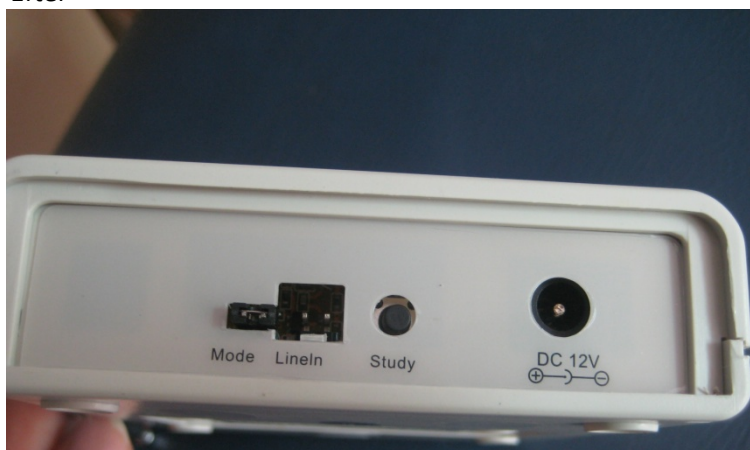

2. Det er vigtigt at signalforstærkeren placeres/monteres højt og at antennen trækkes helt ud!
3. Sæt strøm til signal forstærkeren, og tænd for den.
4. Tag den sensor du vil have der skal sidde længst væk fra alarmcentralen hen ved siden af signal forstærkeren.
5. Bag på signal forstærkeren er der en knap der hedder "Study" tryk på den.
6. Indikator lampen skifter nu fra rød til orange hvilket betyder at signal forstærkeren er i kodnings tilstand.
7. Vift nu med hånden foran PIR sensoren(hvis det er en dør/vinduessensorer så fjern magneten fra basen).
8. Indikator lampen på signal forstærkeren vil nu blinke 3 gange for at lade dig vide at sensorer kodet til den.
9. Tryk på "study" igen for at afslutte kodningstilstand.

Trin 2

1. Tænd nu for alarmen igen, og vent på at den begynder at lyse konstant grøn.
2. Aktiverer alarmen ved at trykke på den lukkede hængelås på fjernbetjeningen til alarmen.
3. Gå nu så langt væk som sensoren skal være fra alarmcentralen og tænd for den(husk at signal forstærkeren skal være i nærheden ad de sensor/er den skal forstærke).
4. Tænd for sensoren(hvis det er en PIR, så tænde på siden eller oven på den) og aktiverer PIR sensoren ved at vifte hånden foran PIR sensoren.
Hvis det er en dør vinduessensor så fjern magneten fra basen.

Wireless signal repeater

Firstly turn off the alarm main panel, by disconnecting the power adapter and by switching the ON/OFF button to OFF. Secondly turn off all sensors!

It is very important that the wireless signal repeater is placed near the sensors that it is to enhance.

Step 1:

1. Insert the included jumper into "mode" on the back of the signal repeater.



Before



After



2. It is very important that the signal repeater is mounted high up.
3. Connect the power adapter to the wireless signal repeater and turn it on.
4. Place the sensor you want to mount furthest away from the main panel, next to the wireless signal repeater.
5. On the bottom of the wireless signal repeater there is a button called "study" press it.
6. The indicator lamp on the wireless signal repeater will now change from red to orange, which indicates that the wireless signal repeater now is in code mode.
7. Turn on the PIR sensor and wave you hand in front of it(if it is a door/window sensor you are coding then remove the magnet from the base).
8. The Indicator lamp on the wireless signal repeater will now blink 3 times which means that the sensor has been coded successfully.
9. Press the "study" button again to exit code mode.

Step 2:

1. Connect the power adapter to the alarm and switch the ON/OFF to ON.
2. Wait for the status lamp on the alarm main panel starts blink green with fixed intervals.
3. Move to location where the sensor you have just coded to the wireless signal repeater is to be mounted.
4. Turn on the sensor (if it is a PIR turn it on, on the side) and activate it by wavering your hand in front of it.
If it is a door window sensor simply remove the magnet from the base.

Skriv til os på support@homealarm.dk, hvis du har spørgsmål til dit produkt.

HomeAlarm ApS tager forbehold for tryk- og formuleringsfejl.

Copyright © 2010 HomeAlarm ApS